

INSTRUCTION MANUAL
FOR
WJ-8718 SERIES HF RECEIVER

This document and subject matter disclosed herein are proprietary items to which Watkins-Johnson Company retains the exclusive right of dissemination, reproduction, manufacture and sale.

This document is provided to the individual or using organization for their use alone in the direct support of the associated equipment unless permission for further disclosure is expressly granted in writing.

WATKINS-JOHNSON COMPANY
700 QUINCE ORCHARD ROAD
GAITHERSBURG, MARYLAND 20878

TABLE OF CONTENTS

SECTION I

GENERAL DESCRIPTION

<u>Paragraph</u>		<u>Page</u>
1.1	Electrical Characteristics	1-1
1.2	Mechanical Characteristics	1-2
1.3	Equipment Supplied	1-2
1.4	Equipment Required But Not Supplied	1-3
1.5	Optional Equipment	1-3

SECTION II

INSTALLATION AND OPERATION

2.1	Unpacking and Inspection	2-1
2.2	Preparation for Reshipment and Storage	2-1
2.3	Installation	2-1
2.3.1	Voltage Selector/Fuse Block and Line Cord Receptacle (FL1J1)	2-2
2.3.2	RF Input (A2J1)	2-2
2.3.3	Alternate Fuseholder (XF2)	2-2
2.3.4	IF Output (J12)	2-2
2.3.5	Terminal Board (TB1)	2-2
2.3.6	Terminal Board (TB2)	2-9
2.3.7	Clock Switch (S2)	2-9
2.3.8	1 MHz REF (J11)	2-9
2.3.9	Phones Jack (J13)	2-9
2.3.10	Remote Input (A6A1J1)	2-10
2.4	Operation	2-10
2.4.1	Push On/Off Power (S1)	2-10
2.4.2	Meter (M1)	2-10
2.4.3	Meter Switches	2-10
2.4.4	Gain Mode	2-12
2.4.5	RF Gain Control	2-12
2.4.6	Detection Mode	2-12
2.4.7	IF Bandwidth (kHz)	2-13
2.4.8	BFO Offset	2-13
2.4.9	Tuned Frequency Readout	2-13
2.4.10	Tuning Knob	2-13
2.4.11	Tuning Resolution (A7)	2-14
2.4.12	Line Audio Level (R1)	2-14
2.4.13	Phone Level Control	2-14
2.4.14	ISB Audio Switch	2-14

TABLE OF CONTENTS (Cont'd)

SECTION III

CIRCUIT DESCRIPTION

<u>Paragraph</u>		<u>Page</u>
3.3.6	Power Supply Section	3-13
3.3.6.1	Type 76240 Power Distribution (A1)	3-13
3.3.6.2	Power Supply Regulators	3-14
3.3.6.3	Power Supply Voltage Distribution	3-14
3.4	Circuit Descriptions	3-14
3.4.1	Type 791616-1 RF Input Filter (A2)	3-21
3.4.2	Type 791592-1 Input Converter (A3)	3-21
3.4.2.1	Circuit Description	3-22
3.4.3	Type 791569-1 IF Motherboard (A4)	3-22
3.4.4	Type 791594-1 10.7 MHz Filter Switch (A4A1)	3-23
3.4.4.1	Circuit Description	3-23
3.4.5	Type 71430-1 10.7 MHz/455 kHz Converter (A4A2)	3-24
3.4.5.1	Circuit Description	3-24
3.4.6	Type 791595-1 455 MHz Filter Switch (A4A3)	3-24
3.4.6.1	Circuit Description	3-25
3.4.7	Type 791596-1 USB Filter Switch (A4A4)	3-26
3.4.7.1	Circuit Description	3-26
3.4.8	Type 791597-1 ISB/LSB Filter Switch (A4A5)	3-27
3.4.8.1	Circuit Description	3-27
3.4.9	Type 78112-1 AGC Amplifier (A4A6)	3-28
3.4.9.1	Circuit Description	3-29
3.4.10	Type 72488-1 455 kHz Amplifier/AM Detector (A4A7)	3-31
3.4.10.1	Circuit Description	3-31
3.4.11	Type 791598-1 ISB Detector/Audio (A4A8)	3-32
3.4.11.1	Circuit Description	3-33
3.4.12	Type 791599-1 FM/CW/SSB Detector (A4A9)	3-33
3.4.12.1	Circuit Description	3-34
3.4.13	Type 746001-1 Audio Amplifier (A4A10)	3-35
3.4.13.1	Circuit Description	3-35
3.4.14	Synthesizer Circuit Descriptions	3-36
3.4.15	General Phase Lock Loop Theory	3-37
3.4.15.1	Basic Phase Lock Loop	3-37
3.4.15.2	Programmable Phase Lock Loop	3-37
3.4.15.3	Prescaling Technique	3-38
3.4.15.4	Phase Detector	3-40
3.4.16	Type 791600-1 1st LO Synthesizer (A5A1A2)	3-42
3.4.16.1	Functional Description	3-42
3.4.16.2	Circuit Description	3-44
3.4.16.2.1	Counting Cycle	3-44
3.4.16.2.2	Prescaler, U1 and U2A	3-45
3.4.16.2.3	Digital Code Converter U4	3-46
3.4.16.2.4	Programmable Counter U9, U10, U11	3-46

TABLE OF CONTENTS (Cont'd)

SECTION III

CIRCUIT DESCRIPTION

<u>Paragraph</u>		<u>Page</u>
3.4.16.2.5	Swallow Counter U8, U9	3-46
3.4.16.2.6	Carry Condition U12A, U6B	3-47
3.4.16.2.7	Count Sequence	3-48
3.4.16.2.8	Divider Section Terminal Count	3-50
3.4.16.2.9	VCO Band Select Code	3-51
3.4.17	Type 791629 Voltage Controlled Oscillator (A5A1A1)	3-51
3.4.17.1	Function Description	3-51
3.4.17.2	Circuit Description	3-52
3.4.18	Type 791601 2nd LO Synthesizer (A5A2)	3-53
3.4.18.1	Functional Description	3-53
3.4.18.2	Circuit Description	3-53
3.4.19	Type 791600-1 3rd LO Synthesizer (A5A1A2)	3-56
3.4.19.1	Functional Description	3-56
3.4.19.2	Circuit Description	3-57
3.4.20	Type 791576-1 BFO Synthesizer (A5A3)	3-57
3.4.20.1	Functional Description	3-57
3.4.20.2	Circuit Description	3-58
3.4.21	Type 791600-1 Time Base Circuits (A5A1A2)	3-60
3.4.21.1	Functional Description	3-60
3.4.21.2	Circuit Description	3-61
3.4.22	Type 791630-1 1st and 3rd LO Synthesizer/Time Base (A5A1)	3-63
3.4.23	Type 791575-1 Manual Tuning Up/Down Counter (A6A1)	3-63
3.4.23.1	Integrated Circuit Data	3-63
3.4.23.2	Circuit Description	3-65
3.4.24	Type 791828-1 Front Panel Interconnect (A6A2)	3-67
3.4.25	Type 791874-1 Manual Tuning Module (A7)	3-68
3.4.25.1	Type 791589 Tuning Resolution (A7A1)	3-69
3.4.25.2	Encoder Assembly (A7U1)	3-69
3.4.26	Type 791578-1 Frequency Display (A8)	3-70
3.4.27	Type 791827 BFO Switch (A9)	3-71
3.4.28	Type 796053 Front Panel Control (A10)	3-71
3.4.29	Type 791583 Upper Panel Control (A10A1)	3-72
3.4.30	Type 796054 Lower Panel Control (A10A2)	3-72
3.4.31	Type 791826 Lower Panel Control (A10A2)	3-73
3.4.32	Main Chassis Regulator, U4	3-73
3.4.33	Main Chassis Battery, BT1	3-73

TABLE OF CONTENTS (Cont'd)

SECTION IV

MAINTENANCE

<u>Paragraph</u>		<u>Page</u>
4.1	General	4-1
4.2	Preventive Maintenance	4-1
4.2.1	Visual Inspection	4-1
4.2.2	Cleaning	4-2
4.2.3	Lubrication	4-2
4.3	Corrective Maintenance	4-3
4.3.1	General	4-3
4.3.2	Test Equipment Required	4-3
4.3.3	Receiver Checkout Procedures	4-4
4.3.3.1	Procedure Guidelines	4-5
4.3.3.2	Preliminary Set-Up Procedure	4-5
4.3.4	Receiver Troubleshooting Procedures	4-10
4.3.5	Module Troubleshooting Procedures	4-15
4.3.5.1	Procedure Guidelines	4-15
4.3.5.2	RF Filter Testing and Troubleshooting	4-16
4.3.5.2.1	RF Filter Checkout Procedure	4-16
4.3.5.2.2	RF Filter Fault Isolation	4-17
4.3.5.3	Input Converter Testing and Troubleshooting	4-17
4.3.5.3.1	Input Converter Checkout Procedure	4-17
4.3.5.3.2	Input Converter, A3, Fault Isolation	4-18
4.3.5.4	10.7 MHz Filter Switch Testing and Troubleshooting	4-19
4.3.5.4.1	10.7 MHz Filter Switch Checkout Procedure	4-19
4.3.5.4.2	10.7 MHz Filter Switch, A4A1, Fault Isolation	4-20
4.3.5.5	10.7 MHz/455 kHz Converter Testing and Troubleshooting	4-21
4.3.5.5.1	10.7 MHz/455 kHz Converter Checkout Procedure	4-21
4.3.5.5.2	10.7 MHz/455 kHz Converter, A4A2, Fault Isolation	4-22
4.3.5.6	455 kHz Filter Switch Testing and Troubleshooting	4-22
4.3.5.6.1	455 kHz Filter Switch Checkout Procedure	4-23
4.3.5.6.2	455 kHz Filter Switch, A4A3, Fault Isolation	4-23
4.3.5.7	USB Filter Switch Testing and Troubleshooting	4-25
4.3.5.7.1	USB Filter Switch Checkout Procedure	4-25
4.3.5.7.2	USB Filter Switch, A4A4, Fault Isolation	4-26
4.3.5.8	ISB/LSB Filter Switch Testing and Troubleshooting	4-26
4.3.5.8.1	ISB/LSB Filter Switch Checkout Procedure	4-27
4.3.5.8.2	ISB/LSB Filter Switch, A4A5, Fault Isolation	4-27
4.3.5.9	455 kHz Amplifier/AM Detector Testing and Troubleshooting	4-28
4.3.5.9.1	455 kHz Amplifier/AM Detector Checkout Procedure	4-28
4.3.5.9.2	455 kHz Amplifier/AM Detector, A4A7, Fault Isolation	4-29
4.3.5.10	FM/CW/SSB Detector Testing and Troubleshooting	4-30
4.3.5.10.1	CW/SSB Detector Checkout Procedure	4-30
4.3.5.10.2	FM Detector Checkout Procedure	4-31
4.3.5.10.3	FM/CW/SSB Detector, A4A9, Fault Isolation	4-31

TABLE OF CONTENTS (Cont'd)

SECTION IV

MAINTENANCE

<u>Paragraph</u>		<u>Page</u>
4.3.5.11	Audio Amplifier Testing and Troubleshooting	4-33
4.3.5.11.1	Audio Amplifier Checkout Procedure	4-33
4.3.5.11.2	Audio Amplifier, A4A10, Fault Isolation	4-34
4.3.5.12	ISB Detector/Audio Testing and Troubleshooting	4-35
4.3.5.12.1	ISB Detector/Audio Checkout Procedure	4-35
4.3.5.12.2	ISB Detector/Audio, A4A8, Fault Isolation	4-35
4.3.5.13	AGC Testing and Troubleshooting	4-37
4.3.5.13.1	AGC Checkout Procedure	4-37
4.3.5.13.2	AGC, A4A6, Fault Isolation	4-38
4.3.5.14	Front Panel Interconnect Testing and Troubleshooting	4-40
4.3.5.14.1	Front Panel Interconnect Checkout Procedure	4-40
4.3.5.14.2	Front Panel Interconnect Fault Isolation	4-41
4.3.5.15	Lower Panel Control Testing and Troubleshooting	4-42
4.3.5.15.1	Lower Panel Control Checkout Procedure	4-42
4.3.5.15.2	Lower Panel Control Fault Isolation	4-43
4.3.5.16	1st LO Synthesizer Testing and Troubleshooting	4-43
4.3.5.16.1	1st LO Synthesizer Checkout Procedure	4-43
4.3.5.16.2	1st LO Synthesizer, P/O A5A1, Fault Isolation	4-43
4.3.5.16.3	1st LO Synthesizer Supplementary Troubleshooting Data	4-45
4.3.5.17	2nd LO Synthesizer Testing and Troubleshooting	4-46
4.3.5.17.1	2nd LO Synthesizer Checkout Procedure	4-46
4.3.5.17.2	2nd LO Synthesizer, A5A2, Fault Isolation	4-46
4.3.5.17.3	2nd LO Synthesizer Supplementary Troubleshooting Data	4-49
4.3.5.18	3rd LO Synthesizer Testing and Troubleshooting	4-49
4.3.5.18.1	3rd LO Synthesizer Checkout Procedure	4-50
4.3.5.18.2	3rd LO Synthesizer, P/O A5A1, Fault Isolation	4-50
4.3.5.18.3	3rd LO Synthesizer Supplementary Troubleshooting Data	4-51
4.3.5.19	BFO Synthesizer Testing and Troubleshooting	4-51
4.3.5.19.1	BFO Synthesizer Checkout Procedure	4-51
4.3.5.19.2	BFO Synthesizer, A5A3, Fault Isolation	4-51
4.3.5.19.3	BFO Synthesizer Supplementary Troubleshooting Data	4-53
4.3.5.20	Time Base Testing and Troubleshooting	4-53
4.3.5.20.1	Time Base Checkout Procedure	4-53
4.3.5.20.2	Time Base, P/O A5A1, Fault Isolation	4-54
4.3.5.20.3	Time Base Supplementary Troubleshooting Data	4-54
4.3.6	Parts Replacement Guidelines	4-55
4.3.6.1	Soldering Techniques	4-55
4.3.6.2	Component Replacement	4-55
4.3.6.3	Realignment	4-55
4.3.7	Adjustment/Alignment Procedures	4-56
4.3.7.1	General	4-56
4.3.7.2	Synthesizer Alignment	4-56

TABLE OF CONTENTS (Cont'd)

SECTION IV

MAINTENANCE

<u>Paragraph</u>		<u>Page</u>
4.3.7.2.1	1st LO Synthesizer Alignment	4-56
4.3.7.2.2	2nd LO Synthesizer Alignment (A5A2)	4-57
4.3.7.2.3	2nd LO Filter Adjustment	4-59
4.3.7.2.4	3rd LO Synthesizer Alignment	4-60
4.3.7.2.5	2 MHz Time Base Adjustment	4-60
4.3.7.2.6	BFO Synthesizer Alignment	4-60
4.3.7.3	Receiver Alignment	4-61
4.3.7.3.1	Input Converter Alignment	4-61
4.3.7.3.2	10.7 MHz Filter Switch Adjustment	4-62
4.3.7.3.3	455 MHz Amplifier/AM Detector Response Alignment	4-63
4.3.7.3.4	455 kHz Amplifier/AM Detector Gain Adjustment	4-66
4.3.7.3.5	USB Filter Switch and ISB/LSB Filter Switch Adjustment	4-66
4.3.7.3.6	ISB Detector/Audio Adjustment	4-67
4.3.7.3.7	FM Discriminator Alignment	4-68
4.3.7.4	LED Intensity Adjustment	4-70

SECTION

REPLACEMENT PARTS LIST

5.1	Unit Numbering Method	5-1
5.2	Reference Designation Prefix	5-1
5.3	List of Manufacturers	5-1
5.4	Parts List	5-5
5.5	Assembly Revision Level	5-5
5.6	Types WJ-8718, WJ-8718-9 and WJ-8718A HF Receiver, Main Chassis	5-7
5.6.1	Type 76240 Power Distribution	5-17
5.6.2	Type 791616-1 RF Filter	5-19
5.6.2.1	Part 280093 30 MHz Low Pass Filter	5-20
5.6.3	Type 791592-1 Input Converter	5-21
5.6.3.1	Part 370611-1 1st Mixer, 1st IF	5-22
5.6.3.2	Part 370646-1 2nd Mixer, 2nd IF	5-23
5.6.4	Type 791569-1 IF Motherboard	5-26
5.6.4.1	Type 791594-1 10.7 MHz Filter Switch	5-29
5.6.4.2	Type 71430-1 10.7 MHz/455 kHz Converter	5-33
5.6.4.3	Type 791595-1 455 kHz Filter Switch	5-35
5.6.4.4	Type 791596-1 USB Filter Switch	5-37
5.6.4.5	Type 791597-1 ISB/LSB Filter Switch	5-39
5.6.4.6	Type 78112-1 AGC Amplifier	5-41
5.6.4.7	Type 72488-1 455 kHz Amplifier/AM Detector	5-44

TABLE OF CONTENTS (Cont'd)

SECTION V

REPLACEMENT PARTS LIST

<u>Paragraph</u>		<u>Page</u>
5.6.4.8	Type 791598-1 ISB Detector/Audio	5-47
5.6.4.9	Type 791599-1 FM, CW, & SSB Detector/Audio	5-51
5.6.4.10	Type 746001-1 Audio Amplifier	5-54
5.6.5	Type 791570-1 Synthesizer Motherboard	5-56
5.6.5.1	Type 791630-1 1st and 3rd LO Synthesizer	5-59
5.6.5.1.1	Type 791629 1st LO VCO Assembly	5-62
5.6.5.1.1.1	Part 34750 1st LO Voltage Controlled Oscillator	5-63
5.6.5.1.2	Type 791600-1 1st & 3rd LO Synthesizer	5-66
5.6.5.2	Type 791601 2nd LO Synthesizer	5-72
5.6.5.3	Type 791576-1 BFO Synthesizer	5-78
5.6.6	Type 791580 I/O Motherboard	5-83
5.6.6.1	Type 791575-3 Manual Tuning Up/Down Counter	5-85
5.6.6.2	Type 791828-1 Front Panel Interconnect	5-86
5.6.7	Type 791874-1 Manual Tuning Module	5-87
5.6.7.1	Type 791589 Tuning Resolution	5-89
5.6.8	Type 791578-1 Frequency Display	5-90
5.6.9	Type 791827 BFO Switch	5-91
5.6.10	Types 791684-2 and 796053 Front Panel Control	5-92
5.6.10.1	Type 791583 Upper Panel Control	5-94
5.6.10.2	Types 791826 and 796054 Lower Panel Control	5-95

SECTION VI

SCHEMATIC DIAGRAM

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
1-1	WJ-8718 Series HF Receiver	1-0
1-2	Tip-Ring-Sleeve Plug Outline Drawing	1-7

TABLE OF CONTENTS (Cont'd)

SECTION VI

LIST OF ILLUSTRATIONS

FigurePage

Section II

2-1	WJ-8718 Series HF Receiver, Critical Dimensions	2-0
2-2	WJ-8718 Series HF Receiver, Front Panel View	2-3
2-3	WJ-8718 Series HF Receiver, Rear Panel View	2-4
2-4	WJ-8718A HF Receiver, Front Panel View	2-5
2-5	WJ-8718A HF Receiver, Rear Panel View	2-6
2-6	WJ-8718-9 HF Receiver, Front Panel View	2-7
2-7	WJ-8718-9 HF Receiver, Rear Panel View	2-8

Section III

3-1	Receiver Overall Block Diagram	3-2
3-2	Receiver Functional Block Diagram	3-4
3-3	Receiver Frequency Conversion	3-5
3-4	Power Supply Section Functional Block Diagram	3-14
3-5	Power Supply Voltage Distribution Diagram (Sheet 1 of 3)	3-15
3-5	Power Supply Voltage Distribution Diagram (Sheet 2 of 3)	3-17
3-5	Power Supply Voltage Distribution Diagram (Sheet 3 of 3)	3-19
3-6	Input Converter Functional Block Diagram	3-21
3-7	10.7 MHz Filter Switch Functional Block Diagram	3-23
3-8	10.7 MHz/455 kHz Converter Functional Block Diagram	3-24
3-9	455 kHz Filter Switch Functional Block Diagram	3-25
3-10	USB Filter Switch Block Diagram	3-26
3-11	ISB/LSB Filter Switch Functional Block Diagram	3-27
3-12	AGC Amplifier Functional Block Diagram	3-28
3-13	455 kHz Amplifier/AM Detector Functional Block Diagram	3-31
3-14	ISB Detector/Audio Functional Block Diagram	3-32
3-15	FM/CW/SSB Detector Functional Block Diagram	3-34
3-16	Audio Amplifier Functional Block Diagram	3-35
3-17	Basic Phase Lock Loop Configuration	3-37
3-18	Programmable Phase Lock Loop	3-38
3-19	Two-Modulus Prescaling in the Phase Lock Loop	3-39
3-20	Prescaler Dividing Technique	3-40
3-21	Phase Detector Timing Diagram	3-41
3-22	1st LO Functional Block Diagram	3-43
3-23	1st LO Counting Cycle	3-45

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
Section III		
3-24	1st LO Prescaler Timing Diagram	3-45
3-25	Two-Pulse Early Decode, Count Termination	3-50
3-26	VCO Functional Block Diagram	3-52
3-27	2nd LO Functional Block Diagram	3-53
3-28	2nd LO Prescaler Timing Diagram	3-55
3-29	3rd LO Functional Block Diagram	3-57
3-30	BFO Functional Block Diagram	3-58
3-31	Time Base Circuits Functional Block Diagram	3-61
3-32	Tri-State Buffers	3-62
3-33	Manual Tuning Up/Down Counter Block Diagram	3-64
3-34	Up/Down Counter Integrated Circuit Data	3-64
3-35	Front Panel Interconnect Integrated Circuit Data	3-67
3-36	Encoder Assembly Timing Diagram	3-70
3-37	Simplified Headphone Audio Routing	3-73
Section IV		
4-1	Receiver Checkout Procedure, Test Setup	4-6
4-2	Phase Detector Timing Diagram	4-45
4-3	Input Converter Alignment Test Setup	4-61
4-4	10.7 MHz Filter Switch Adjustment, Test Setup	4-62
4-5	455 kHz Amplifier/AM Detector Response Alignment, Test Setup	4-64
4-6	455 kHz Amplifier/AM Detector Response Alignment, Typical Response	4-65
4-7	455 kHz Amplifier/AM Detector Gain Adjustment, Test Setup	4-65
4-8	ISB Detector/Audio Adjustment, Test Setup	4-67
4-9	FM Discriminator Alignment, Test Setup	4-69
4-10	FM Discriminator Alignment, Typical Response	4-70
Section V		
5-1	WJ-8718 HF Receiver, Front Panel, Location of Components	5-8
5-2	WJ-8718 HF Receiver, Rear Panel, Location of Components	5-8
5-3	WJ-8718-9 HF Receiver, Front Panel, Location of Components	5-9
5-4	WJ-8718-9 HF Receiver, Rear Panel, Location of Components	5-9
5-5	WJ-8718A HF Receiver, Front Panel, Location of Components	5-10
5-6	WJ-8718A HF Receiver, Rear Panel, Location of Components	5-10
5-7	WJ-8718 Series HF Receiver, Top View, Location of Components	5-12
5-8	WJ-8718 Series HF Receiver, Bottom View, Location of Component	5-14

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

<u>Figure</u>	<u>Section V</u>	<u>Page</u>
5-9	Type 76240 Power Distribution (A1), Location of Components	5-18
5-10	Type 791616-1 Input Filter (A2), Location of Components	5-19
5-11	Part 280093 30 MHz Low Pass Filter (A2A1), Location of Components	5-20
5-12	Type 791592-1 Input Converter (A3), Location of Components	5-21
5-13	Part 370611-1 1st Mixer, 1st IF (A3A1), Location of Components	5-22
5-14	Part 370646-1 2nd Mixer, 2nd IF (A3A2), Location of Components	5-24
5-15	Type 791569-1 IF Motherboard (A4), Location of Components	5-27
5-16	Type 791594-1 10.7 MHz Filter Switch (A4A1), Location of Components	5-30
5-17	Type 71430-1 10.7 MHz/455 kHz Converter (A4A2), Location of Components	5-34
5-18	Type 791595-1 455 kHz Filter Switch (A4A3), Location of Components	5-36
5-19	Type 791596-1 USB Filter Switch (A4A4), Location of Components	5-38
5-20	Type 791597-1 ISB, LSB Filter Switch (A4A5), Location of Components	5-40
5-21	Type 78112-1 AGC Amplifier (A4A6), Location of Components	5-42
5-22	Type 72488-1 455 kHz Amplifier/AM Detector (A4A7), Location of Components	5-45
5-23	Type 791598-1 ISB Detector/Audio (A4A8), Location of Components	5-48
5-24	Type 791599-1 FM, CW, and SSB Detector (A4A9), Location of Components	5-52
5-25	Type 746001-1 Audio Amplifier (A4A10), Location of Components	5-55
5-26	Type 791570-1 Synthesizer Motherboard (A5), Location of Components	5-57
5-27	Type 791630-1 1st and 3rd LO Synthesizer/Timebase (A5A1), Location of Components (Sheet 1 of 2)	5-60
5-27	Type 791630-1 1st and 3rd LO Synthesizer/Timebase (A5A1), Location of Components (Sheet 2 of 2)	5-61
5-28	Type 791629 1st LO VCO Assembly (A5A1A1), Location of Components	5-62
5-29	Part 34750 1st LO Voltage Controlled Oscillator (A5A1A1A1), Location of Components	5-65
5-30	Type 791600-1 1st and 3rd LO Synthesizer (A5A1A2), Location of Components	5-67
5-31	Type 791601 2nd LO Synthesizer (A5A2), Location of Components	5-73
5-32	Type 791576-1 BFO Synthesizer (A5A3), Location of Components	5-79
5-33	Type 791580 I/O Motherboard (A6), Location of Components	5-82
5-34	Type 791575-3 Manual Tuning Up/Down Counter (A6A1), Location of Components	5-84
5-35	Type 791828-1 Front Panel Interconnect (A6A2), Location of Components	5-86
5-36	Type 791874-1 Manual Tuning Module (A7), Location of Components	5-87
5-37	Type 791874-1 Manual Tuning Module (A7), Rear View, Location of Components	5-88
5-38	Type 791589 Tuning Resolution (A7A1), Location of Components	5-89
5-39	Type 791578-1 Frequency Display (A8), Location of Components	5-90
5-40	Type 791827 BFO Switch (A9), Location of Components	5-91

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
Section V (Cont'd)		
5-41	Type 791684-2 Front Panel Control (A10), Location of Components (WJ-8718 only)	5-92
5-42	Type 796053 Front Panel Control (A10), Location of Components	5-93
5-43	Type 791583 Upper Panel Control (A10A1), Location of Components	5-94
5-44	Type 791826 Lower Panel Control (A10A2), Location of Components (WJ-8718 only)	5-95
5-45	Type 796054 Lower Panel Control (A10A2), Location of Components (WJ-8718-9 and WJ-8718A)	5-96
Section VI		
6-1	Type 791616-1 Input Filter (A2), Schematic Diagram 380082	6-3
6-2	Type 791592-1 Input Converter (A3), Schematic Diagram 570202	6-5
6-3	Type 791569-1 IF Motherboard (A4), Schematic Diagram 570191	6-7
6-4	Type 791594-1 10.7 MHz Filter Switch (A4A1), Schematic Diagram 480103	6-9
6-5	Type 71430-1 10.7 MHz/455 kHz Converter (A4A2), Schematic Diagram 34384	6-11
6-6	Type 791595-1 455 kHz Filter Switch (A4A3), Schematic Diagram 43561	6-13
6-7	Type 791596-1 USB Filter Switch (A4A4), Schematic Diagram 480102	6-15
6-8	Type 791597-1 ISB/LSB Filter Switch (A4A5), Schematic Diagram 480105	6-17
6-9	Type 78112-1 AGC Amplifier (A4A6), Schematic Diagram 43229	6-19
6-10	Type 72488-1 455 kHz Amplifier/AM Detector (A4A7), Schematic Diagram 51168	6-21
6-11	Type 791598-1 ISB Detector/Audio (A4A8), Schematic Diagram 43231	6-23
6-12	Type 791599-1 FM, CW & SSB Detector (A4A9), Schematic Diagram 43198	6-25
6-13	Type 746001-1 Audio Amplifier (A4A10), Schematic Diagram 480089	6-27
6-14	Type 791570-1 Synthesizer Motherboard (A5), Schematic Diagram 470518	6-29
6-15	Type 791630-1 1st & 3rd LO Synthesizer/Time Base (A5A1), Schematic Diagram 43305	6-31
6-16	Type 791629 1st LO/VCO Assembly (A5A1A1), Schematic Diagram 51198	6-33
6-17	Type 791600-1 1st & 3rd LO Synthesizer (A5A1A2), Schematic Diagram 61247 (Sheet 1 of 2)	6-35

TABLE OF CONTENTS (Cont'd)

LIST OF ILLUSTRATIONS

<u>Figure</u>		<u>Page</u>
	Section VI	
6-17	Type 791600-1 1st & 3rd LO Synthesizer (A5A1A2), Schematic Diagram 61247 (Sheet 2 of 2)	6-37
6-18	Type 791601 2nd LO Synthesizer (A5A2), Schematic Diagram 61256	6-39
6-19	Type 791576-1 BFO Synthesizer (A5A3), Schematic Diagram 51183	6-41
6-20	Type 791580 I/O Motherboard (A6), Schematic Diagram 470233	6-43
6-21	Type 791575-3 Manual Tuning Up/Down Counter (A6A1), Schematic Diagram 51180	6-45
6-22	Type 791828-1 Front Panel Interconnect (A6A2), Schematic Diagram 470522	6-47
6-23	Type 791578-1 Frequency Display (A8), Schematic Diagram 43242	6-49
6-24	Type WJ-8718 Series HF Receiver, Main Chassis Schematic Diagram 670058	6-51

LIST OF TABLES

<u>Table</u>		<u>Page</u>
	Section I	
1-1	Type WJ-8718 Series HF Receiver, Specifications	1-5
	Section II	
2-1	Remote Input Lines Identification	2-11
	Section III	
3-1	2nd and 3rd IF Bandwidth Selection	3-10
3-2	Detection Mode Selection	3-10
3-3	WJ-8718 Series Phase-Lock Loop Characteristics	3-41
3-4	Code Converter U4, Truth Table	3-46
3-5	Count Sequence, 1st LO Swallow Counter	3-47
3-6	1st LO Divider Count-Down Cycles	3-49
3-7	Band Select Coding	3-51
3-8	Data Selector 14512, Digit Control Codes	3-66
3-9	BFO Switch Truth Tables	3-71

TABLE OF CONTENTS (Cont'd)

LIST OF TABLES

<u>Table</u>		<u>Page</u>
4-1	Test Equipment Required	4-4
4-2	WJ-8718 Series HF Receiver Checkout Procedure	4-7
4-3	WJ-8718 Series HF Receiver Troubleshooting Procedures	4-11
4-4	Input Converter Fault Isolation Chart	4-18
4-5	Input Converter Voltage Table	4-19
4-6	10.7 MHz Filter Switch Fault Isolation Chart	4-20
4-7	10.7 MHz Filter Switch Voltage Chart	4-21
4-8	10.7 MHz/455 kHz Converter Fault Isolation Chart	4-22
4-9	10.7 MHz/455 kHz Converter Voltage Table	4-22
4-10	455 kHz Filter Switch Fault Isolation Chart	4-24
4-11	455 kHz Filter Switch Voltage Table	4-25
4-12	USB Filter Switch Fault Isolation	4-26
4-13	USB Filter Switch, A4A4, Voltage Table	4-26
4-14	ISB/LSB Filter Switch Fault Isolation	4-27
4-15	ISB/LSB Filter Switch, A4A5, Voltage Table	4-28
4-16	Amplifier/AM Detector Fault Isolation Chart	4-29
4-17	455 kHz Amplifier/AM Detector Voltage Table	4-30
4-18	FM/CW/SSB Detector Fault Isolation Chart	4-32
4-19	FM/CW/SSB Detector Voltage Table	4-32
4-20	Audio Amplifier Fault Isolation Chart	4-34
4-21	Audio Amplifier Voltage Table	4-34
4-22	ISB Detector/Audio Fault Isolation Chart	4-36
4-23	ISB Detector/Audio Voltage Table	4-37
4-24	AGC Fault Isolation Chart	4-38
4-25	AGC Voltage Table	4-39
4-26	Front Panel Interconnect Voltage Table	4-41
4-27	VCO Band Select Code	4-44
4-28	1st LO Frequency Chart	4-44
4-29	2nd LO Frequency Chart	4-49
4-30	BFO Frequency Chart	4-52
4-31	Output Divider U10 Frequency Chart	4-53
4-32	Time Base Frequency Chart	4-54
4-33	VCO Alignment Parameters	4-56
4-34	Loop Test Point Voltages	4-58
4-35	2nd LO Synthesizer Tuning Parameters	4-59

Section V

5-1	Equipment Assembly Revision Level Record	5-6
-----	--	-----